

#### **Features**

- LED Premium CREE XP-G R5 LED
- Maximum output of up to 280 lumens
- High efficiency current circuit board
- Maximum runtime of up to 50 hours
- Two rapid switching modes suit various user requirements.
- User-defined mode allows for customized brightness levels and a multitude of functions
- Intelligent memory functions
- Anti-rolling design
- Reverse polarity protection
- Toughened ultra-clear mineral glass with anti-reflective coating
- Aluminum reflector ensures a smooth and powerful beam
- Aero grade aluminum alloy
- HA III Military grade hard anodized
- Detachable two-way anti-rolling clip
- Purpose-made rhombic knurling for better grip
- IPX-8 standard waterproof (submersible to two meters)

#### Dimensions

Accessories


Length: 155mm (6.1") Head Diameter: 22.56mm (0.92") Tail Diameter: 21.5mm (0.85") Weight: 67grams (2.36oz)(without battery)

Clip, lanyard, spare plastic cap, and spare O-ring

## **Battery Options**

_	SIZE	Nominal voltage	Compatible
Primary AA battery	AA	1.5V	Y (Recommended)
Rechargeable AA battery	AA	1.2V	Y (Recommended)
Primary AA Lithium battery	L91	1.5V	Y (Recommended)
Primary FeLiPO4 battery	14500	3.2V	N (Banned)
Rechargeable Li-ion battery	14500	3.7V	N (Banned)

### **Brightness & Runtime**

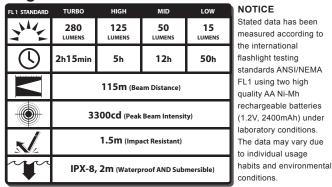


NITECORE (SYSMAX) is a member of PLATO, participating in and helping to develop the ANSI FL1 standard of measurement. Product testing data is in accordance with these internationally recognized scientific standards.

# **Operation instructions**

Battery installation (as the picture shows)

1. Unscrew the tail cap in a counter-clockwise direction.

2. Insert two AA batteries with the positive pole pointing forward (toward the light head).

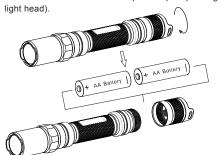

#### WARNING

Ensure batteries are inserted with the positive (+) end pointing to the head. The MT2A will not operate with incorrectly inserted batteries.

# MT2A User Manual

#### Switching ON/OFF

Switch ON: Press the button on the tailcap until a "click" is heard. Switch OFF: Press the button at the tailcap until a second time until a "click" is heard.

## **Mode Switching**

The Nitecore MT2A has two modes: Turbo and user-defined. These two modes can be changed by simply tightening and loosening the flashlight head. Turbo provides 100% output while user-defined users contains five selectable sub-modes.

# Turbo Mode

Turbo mode is accessed when the MT2A flashlight is switched ON and the head lightly tightened. While in this mode, momentary illumination can be achieved by switching off the flashlight and then half pressing and holding the switch. Momentary illumination can be used as a flashing signal indicator or apply to various tactical applications.

**Note:** After three minutes' using of turbo mode, the flashlight will lower its output automatically for preventing overheating, and efficiently ensure the battery runtime.

# **User-Defined Mode**

User-defined mode is accessed by slightly loosening the flashlight head. In this mode, lightly and rapidly pressing the switch will cycle through brightness and other functions in the following order: "High-Mid-Low- SOS-Strobe". Pressing the switch all the way down will save and memorize a desired setting.

#### Tips: Make NITECORE MT2A your perfect multi-task flashlight.

NITECORE MT2A flashlights essentially have two modes: Turbo mode (100% output) and custom mode. Turbo mode is accessed by tightening the flashlight head while any of one of the four customizable modes (strobe, low, medium and high) are selected by loosening the head and rapidly pressing the on/off switch to cycle through the modes. A given mode can be saved by simply turn off the light while in that mode. Real-world examples include: When used as a flashlight around the home, the head can be loosened and low level selected in custom mode, providing long runtimes at a lower light intensity. The same flashlight could then be taken out and used a law-enforcement duty light, with user-defined mode set in strobe, making it easy to alternate between turbo mode and strobe with a simple twist of the flashlight head.

#### Maintenance

Every 6 months, threads should be wiped with a clean cloth followed by a thin coating of silicon-based lubricant.

# Warranty Service

All NITECORE<sup>®</sup> products are warranted for quality. DOA / defective products can be exchanged for replacement though a local distributor/dealer within the 14 days of purchase. After 14 days, all defective / malfunctioning NITECORE<sup>®</sup> products will be repaired free of charge for a period of 18 months from the date of purchase. After 18 months, a limited warranty applies, covering the cost of labor and maintenance, but not the cost of accessories or replacement parts. The warranty is nullified in all of the following situations:

- 1. The product(s) is/are broken down, reconstructed and/or modified by
- unauthorized parties.
- 2. The product(s) is/are damaged through improper use.
- 3. The product(s) is/are damaged by leakage of batteries.

For the latest information on NITECORE  $^{\textcircled{B}}$  products and services, please contact your national NITECORE B distributor or send an email to service@nitecore.com

**I** Please follow our facebook for more info: NITECORE Flashlights

#### SYSMAX Ind. SYSMAX Industry Co., Ltd. TEL: +86-20-83862000 FAX: +86-20-83882723 E-mail: info@nitecore.com Web: www.nitecore.com

FAX: +86-20-83882723 E-mail: info@nitecore.com Web: www.nitecore.com Address: Rm1407-08, Glorious Tower, 850 East Dongfeng Road, Guangzhou, China 510600